

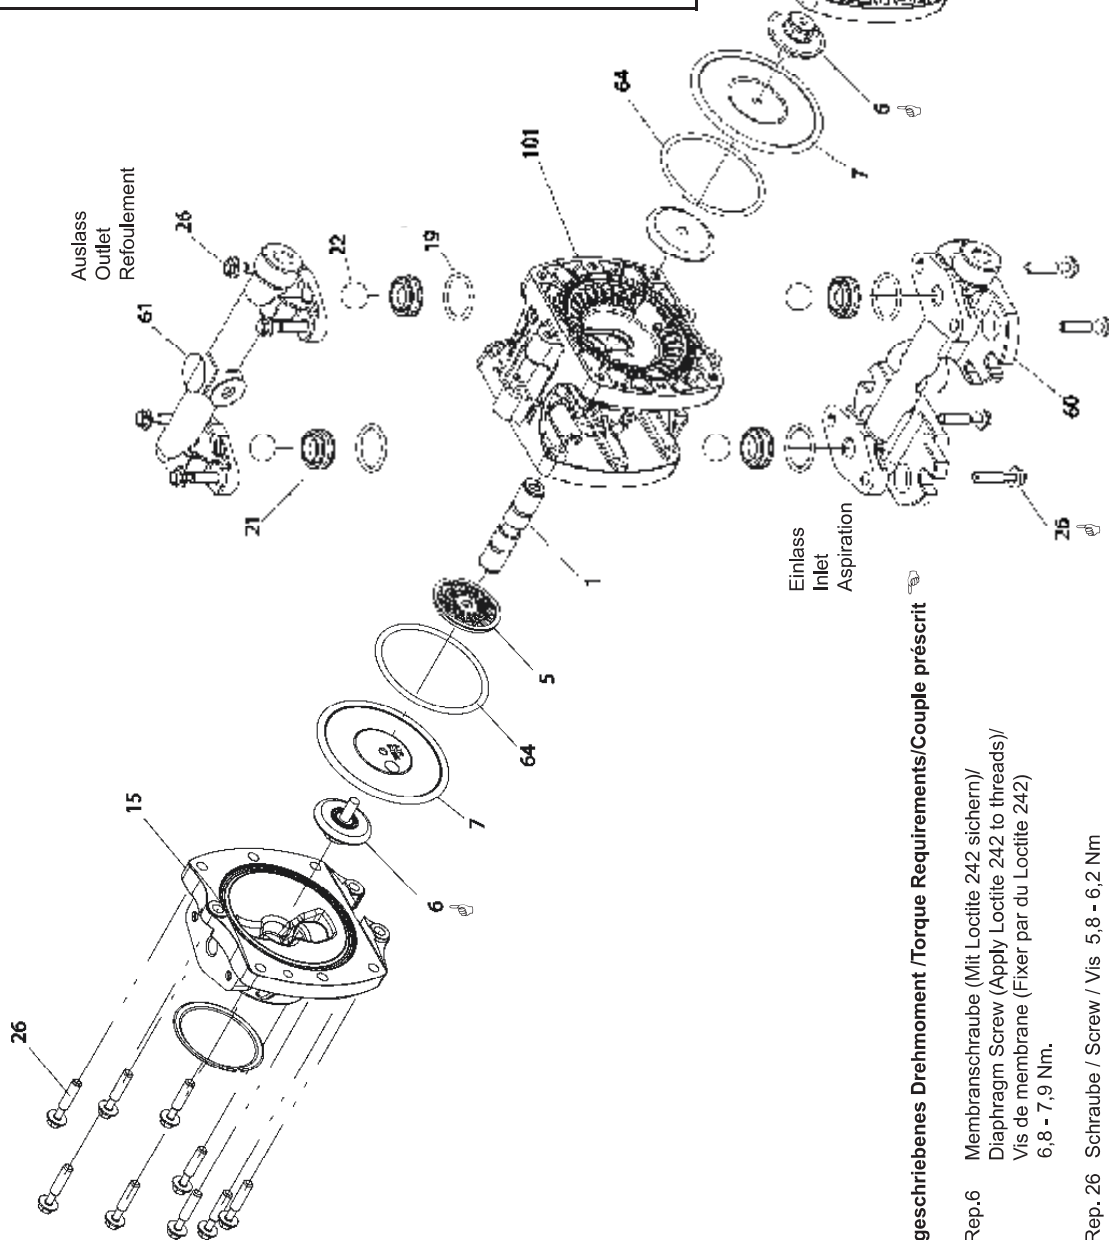


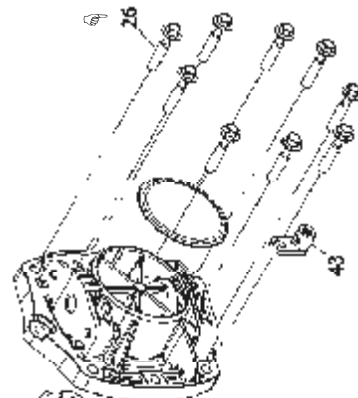

Druckluft-Membranpumpe
Air-operated Diaphragm Pump
Pompe pneumatique à membranes

FDM 07 PP
FDM 07 AC

Adapterplatte-Montagesatz
Adapter Plate Kit
Kit de plaque d'adaptation

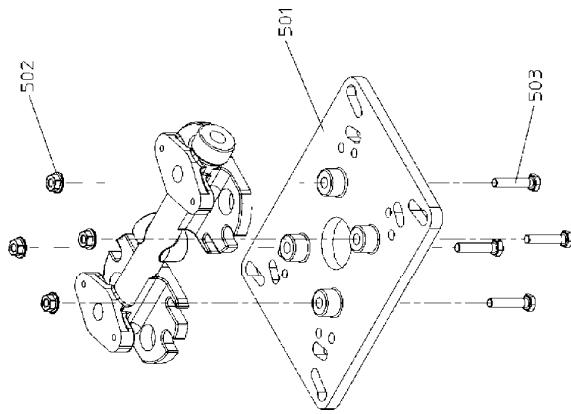

Vorgeschriebenes Drehmoment /Torque Requirements/Couple prescrit

Pos./Item/Rep.6 Membranschraube (Mit Loctite 242 sichern)/
Diaphragm Screw (Apply Loctite 242 to threads)/
Vis de membrane (Fixer par du Loctite 242)
6,8 - 7,9 Nm.

Pos./Item/Rep.26 Schraube / Screw / Vis 5,8 - 6,2 Nm

Schmier- /Dichtungsmittel / Lubrication/Sealant / Lubrifiant/Etanchéité

Alle Dichtungen und die Kolbenstange leicht einfetten.
Lubricate all seals and the rod.
Lubrifier légèrement tous les joints et la tige.